



How to set the adjustable intermittent wiper relay:

### 1. installation :

Firstly, You have to remove the original wiper relay from engine compartment and install our adjustable intermittent wiper relay into the same position.

### 2. setting :

Once you had done the replacement, simply lift the wiper lever into the intermittent position (A) ( please refer to above drawing ) from (B) position and then back to stop position (B). The relay counts the seconds until you move the lever back into the intermittent position (A). You can set the interval from 1.5 seconds to 22 seconds.

### 3. OFF setting

Simply move the wiper lever back to the stop position (B).